


ORCA MX + SENTRY

A COMPREHENSIVE SOLUTION

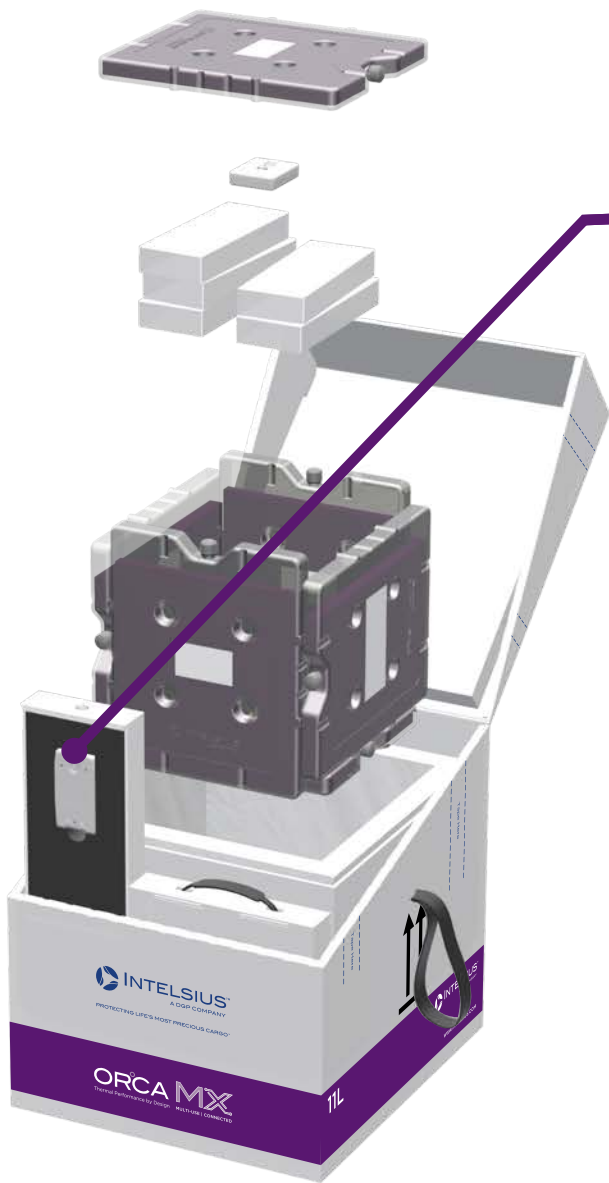

OnAsset SENTRY FlightSafe 500 & Sentinel 100L seamlessly integrate into ORCA MX offering temperature monitoring for sensitive shipments. Users can pre-define dedicated requirements for each shipment, automatically evaluate performance, and conformity upon readout.

The FlightSafe 500 data-logger is held securely inside the ORCA box. Throughout shipping, data from the logger is automatically transmitted to the portal. From here the temperature data of the payload can be viewed without opening the parcel, maintaining payload integrity.

HOW IT WORKS



The FlightSafe 500 logger is securely mounted in the logger compartment of the ORCA MX box



Throughout shipping the logger automatically transmits location and temperature data



Location and temperature data are instantly available to view within the OASight portal

ORCA MX

Thermal Performance by Design MULTI-USE | CONNECTED



Dedicated and secure space outside of payload but inside packaging for the FlightSafe 500 logger



Dedicated and secure space outside of payload but inside packaging for supplies or documents

Product Name	External Dimensions	Payload Dimensions	Payload Volume	Mass	Volumetric Weight L/6	ISTA 7D Summer Duration (hh:mm)	ISTA 7D Winter Duration (hh:mm)
ORCA MX 2-8°C 4L	362 x 321 x 322 mm 14.3 x 12.6 x 12.7 in	165 x 165 x 165 mm 6.5 x 6.5 x 6.5 in	4.5 L	8.2 kg 18.0 lbs	6.2 kgvol ^c 13.8 lbsvol ^c	97:10	144:00+
ORCA MX 2-8°C 11L	426 x 386 x 388 mm 16.8 x 15.2 x 15.3 in	227 x 227 x 227 mm 8.9 x 8.9 x 8.9 in	11.7 L	13.1 kg 28.9 lbs	10.6 kgvol ^c 23.4 lbsvol ^c	108:20	144:00+
ORCA MX 2-8°C 23L	484 x 446 x 448 mm 19.1 x 17.6 x 17.6 in	287 x 287 x 287 mm 11.3 x 11.3 x 11.3 in	23.6 L	18.8 kg 41.4 lbs	16.1 kgvol ^c 35.5 lbsvol ^c	115:50	144:00+
ORCA MX 2-8°C 50L	560 x 520 x 520 mm 22.0 x 20.5 x 20.5 in	369 x 369 x 369 mm 14.5 x 14.5 x 14.5 in	50.2 L	25.9 kg 57.1 lbs	25.2 kgvol ^c 55.6 lbsvol ^c	102:20	144:00+
ORCA MX 15-25°C 4L	362 x 321 x 322 mm 14.3 x 12.6 x 12.7 in	165 x 165 x 165 mm 6.5 x 6.5 x 6.5 in	4.5 L	8.7 kg 19.2 lbs	6.2 kgvol ^c 13.8 lbsvol ^c	120:40	96:00
ORCA MX 15-25°C 11L	426 x 386 x 388 mm 16.8 x 15.2 x 15.3 in	227 x 227 x 227 mm 8.9 x 8.9 x 8.9 in	11.7 L	14.3 kg 31.6 lbs	10.6 kgvol ^c 23.4 lbsvol ^c	136:50	115:00
ORCA MX 15-25°C 23L	484 x 446 x 448 mm 19.1 x 17.6 x 17.6 in	287 x 287 x 287 mm 11.3 x 11.3 x 11.3 in	23.6 L	20.7 kg 45.6 lbs	16.1 kgvol ^c 35.5 lbsvol ^c	140:50	118:50
ORCA MX 15-25°C 50L	560 x 520 x 520 mm 22.0 x 20.5 x 20.5 in	369 x 369 x 369 mm 14.5 x 14.5 x 14.5 in	50.2 L	28.6 kg 63.1 lbs	25.2 kgvol ^c 55.6 lbsvol ^c	137:20	118:50
ORCA MX -15°C to -25°C 4L	362 x 321 x 322 mm 14.3 x 12.6 x 12.7 in	165 x 165 x 165 mm 6.5 x 6.5 x 6.5 in	4.5 L	8.5 kg 18.7 lbs	6.2 kgvol ^c 13.8 lbsvol ^c	87:50	N/A
ORCA MX -15°C to -25°C 11L	426 x 386 x 388 mm 16.8 x 15.2 x 15.3 in	227 x 227 x 227 mm 8.9 x 8.9 x 8.9 in	11.7 L	15.2 kg 33.5 lbs	10.6 kgvol ^c 23.4 lbsvol ^c	95:30	N/A
ORCA MX -15°C to -25°C 23L	484 x 446 x 448 mm 19.1 x 17.6 x 17.6 in	287 x 287 x 287 mm 11.3 x 11.3 x 11.3 in	23.6 L	22.0 kg 48.5 lbs	16.1 kgvol ^c 35.5 lbsvol ^c	96:50	N/A
ORCA MX -15°C to -25°C 50L	560 x 520 x 520 mm 22.0 x 20.5 x 20.5 in	369 x 369 x 369 mm 14.5 x 14.5 x 14.5 in	50.2 L	27.2 kg 59.9 lbs	25.2 kgvol ^c 55.6 lbsvol ^c	89:00	N/A

EUROPE: DGP Intelsius Ltd
1 Harrier Court, Airfield Business Park,
Elvington, York, YO41 4EA,
United Kingdom
t: +44 (0) 1904 607 390
f: +44 (0) 1904 607 391
cs@intelsius.com

AMERICAS: DGP Intelsius LLC
7696 Zionsville Road,
Indianapolis, IN 46268,
United States of America
t: +1 317 452 4006
f: +1 317 290 4621
americasorders@intelsius.com

ASIA: DGP Intelsius Sdn Bhd
Plot 11, Lorong Bemban 2, Estet
Perindustrian Bemban, 31000
Batu Gajah, Malaysia
t: +605 3666 399
f: +605 3669 399
compliance@intelsius.com

GERMANY: DGP Intelsius GmbH
Berliner Allee 65, ecos office 12b
64295 Darmstadt
Germany
t: +49 6151 4936650
f: +49 (0) 6151 4936651
info@intelsius.de

IRELAND: DGP Intelsius Ireland Ltd.
Unit 8, Coolcaslagh Industrial Estate,
Coolcaslagh, Killarney
Co. Kerry, V93 K006, Ireland
t: +353 (0) 26 45699
salesireland@intelsius.com

INDIA: DGP Intelsius Cold Chain Pvt. Ltd.
2, Palak Pluto, Off Link Road,
Kanderpada - Dahisar (West),
Mumbai 400 068, Maharashtra, India
t: +91 22 2892 3675
f: +91 22 2892 3675
compliance@intelsius.com